



A guide to assemble, install,
and take care of your
Standing Straight Lamp

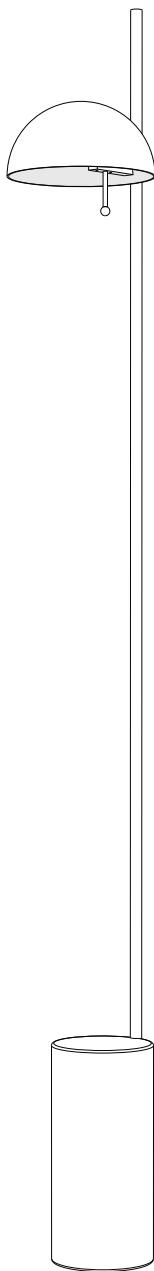








Floor

casegoods
—■■■—

Take the assembly out of the box and disassemble with a M5 allen key as illustrated.

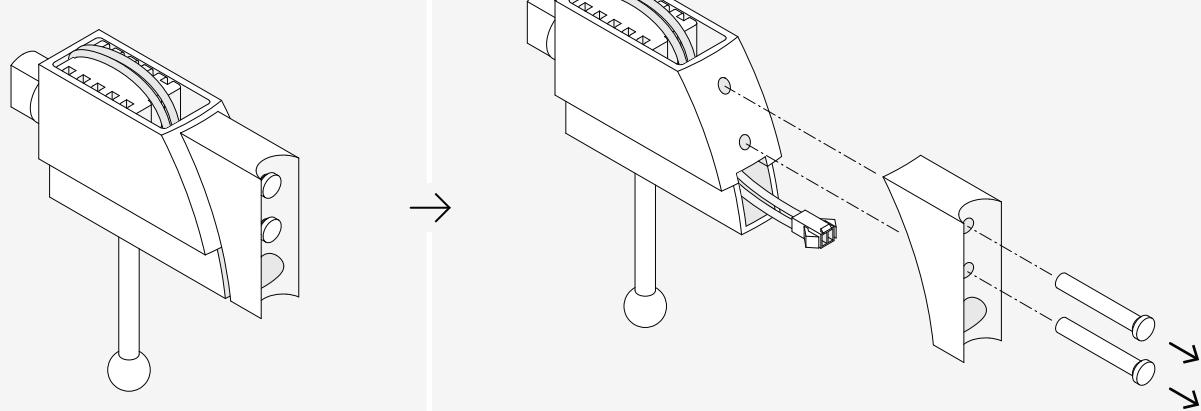

Parts

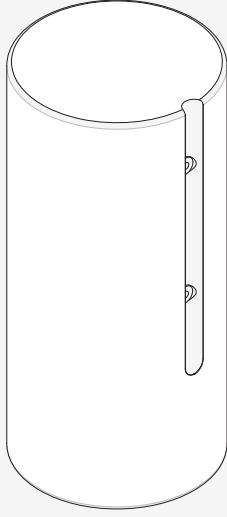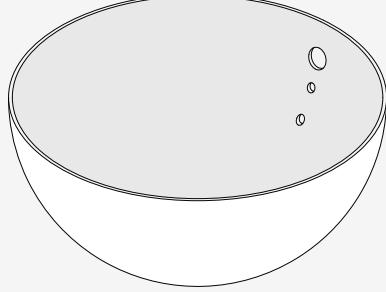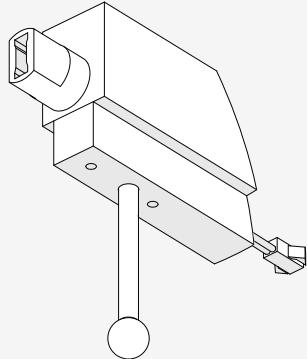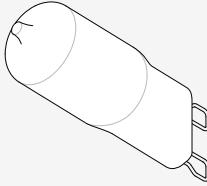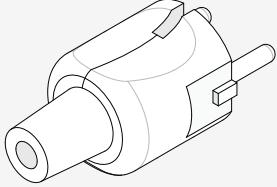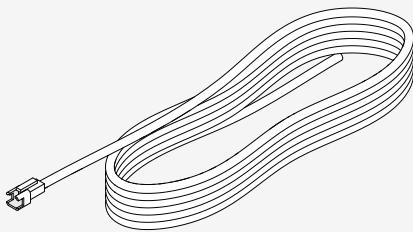			
A Base x1	B Dome x1	C M5_Allen_key_screw x4	Spare x1
			
D Dimmer_assembly x1	E Spacer_piece x1	F Bulb x1	Spare x1
			
G Wall_plug x1	H Connection_wire x1	J Pipe_grub x4	K Rod x1

Tools required


M5 Allen key

Phillips head screwdriver


- 1 Take base (A) out of the cloth sleeve and place, as illustrated below, on a piece of cloth to avoid scratching the surface.

Ensure there is plenty of space around you when assembling.



1

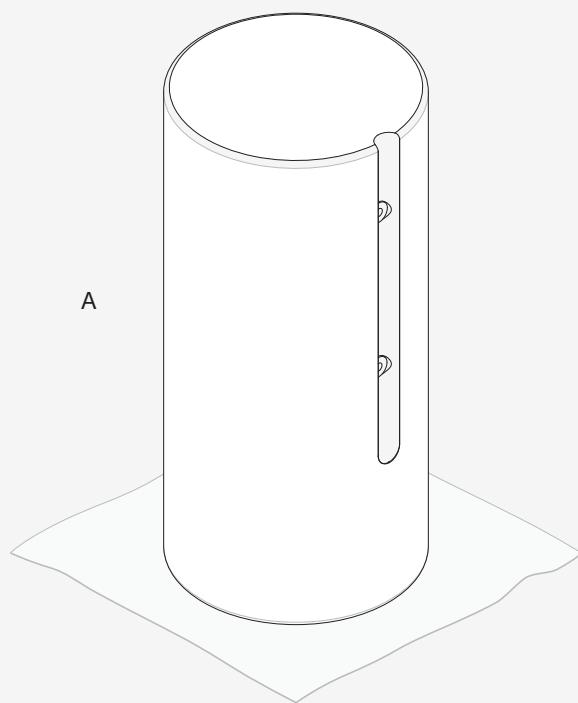

2 Screw in rod (K) into base (A) with the provided m5 allen key screws (C). Ensure the rod remains upright (fig 2.1) when fastening the screws all the way into marble base (fig 2.2).




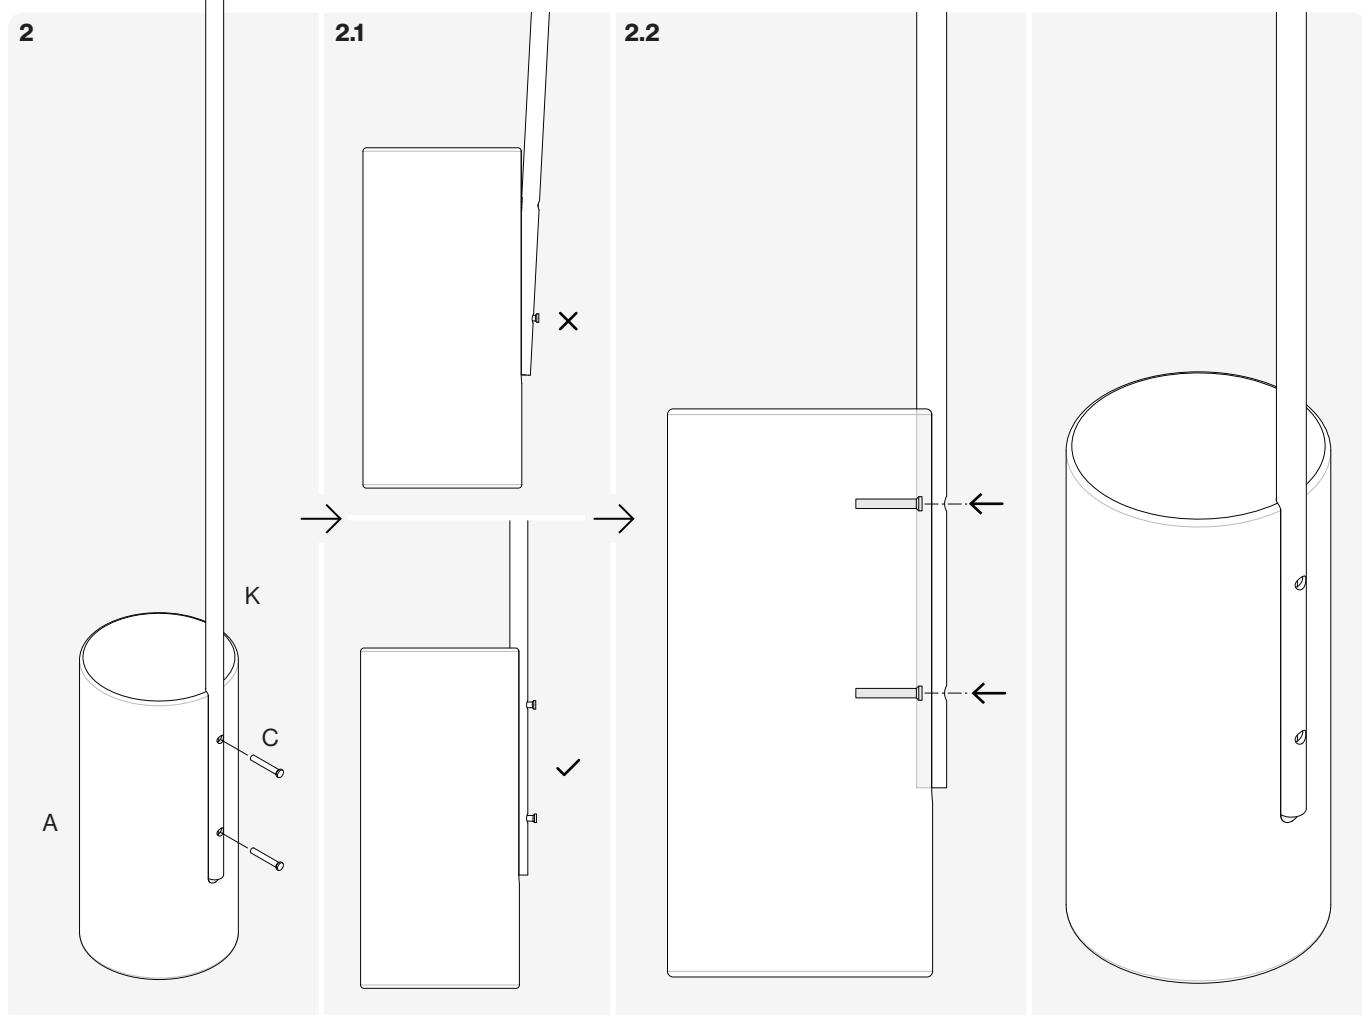


- 3 Pass connection wire (H) through the hole in the top of the rod until you can pull it out from the bottom of the rod while leaving the connection plug exposed.
- 4 Pass connection plug through spacer piece (E), and screw spacer piece to the rod (K) using the provided M5 allen key screws (C).

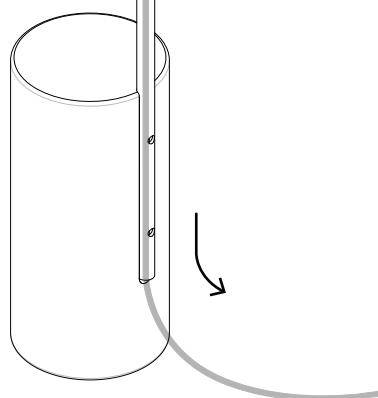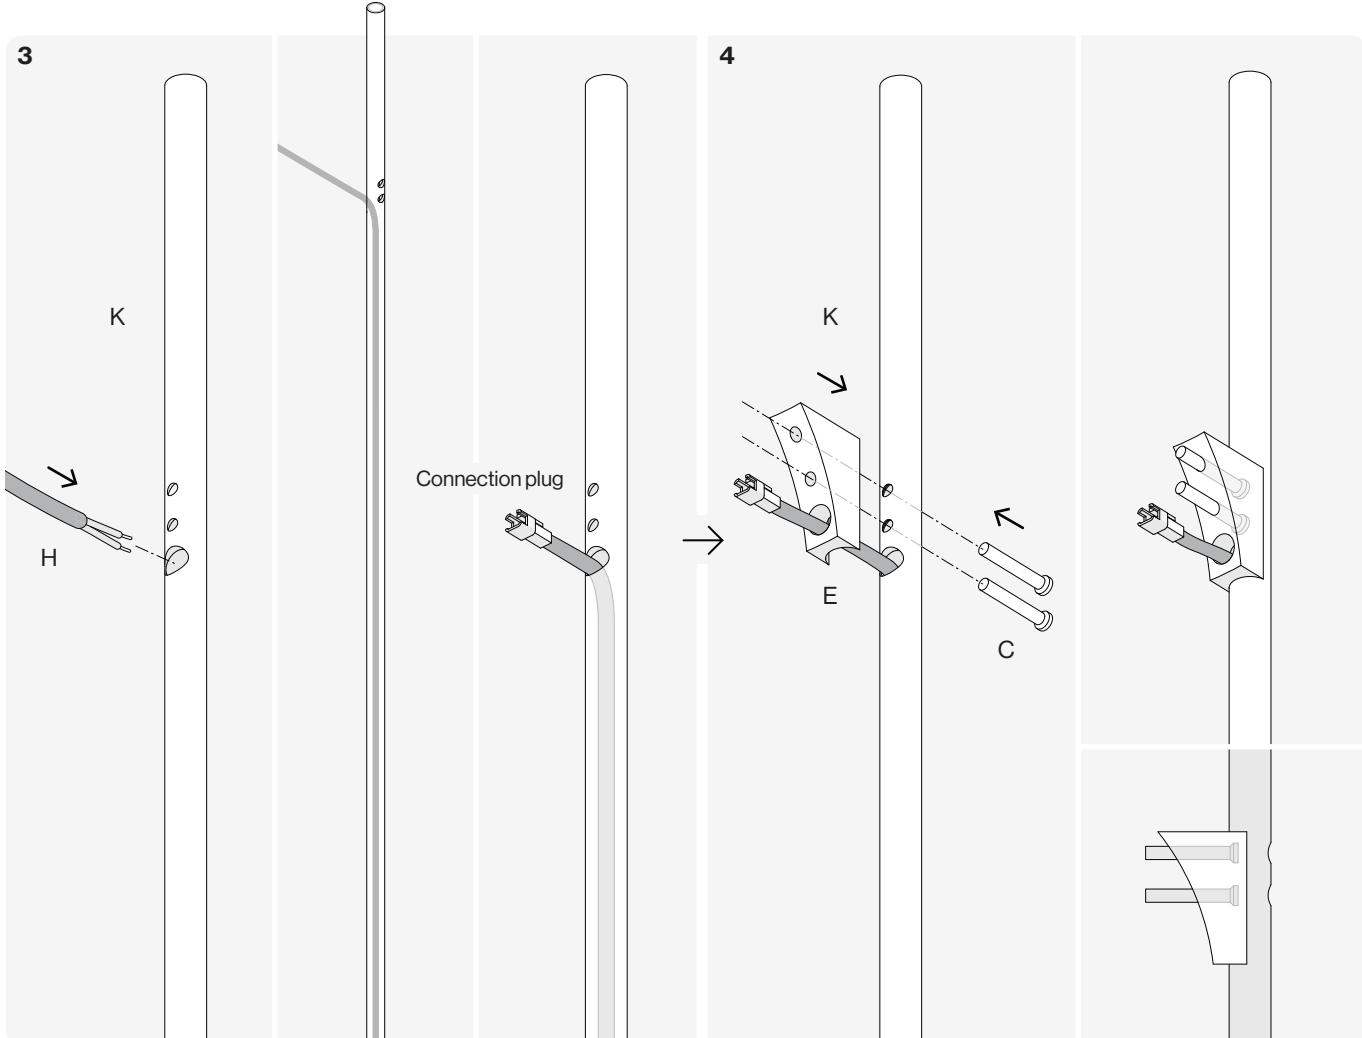


5 Join the plug from the dimmer assembly (D) to the plug from the connection wire (H) while passing the wire through the dome (B) as illustrated (fig 5.1).


Align dimmer assembly to holes on the dome, and push against the dome while simultaneously tightening the screws (C) into the dimmer assembly (fig 5.2).

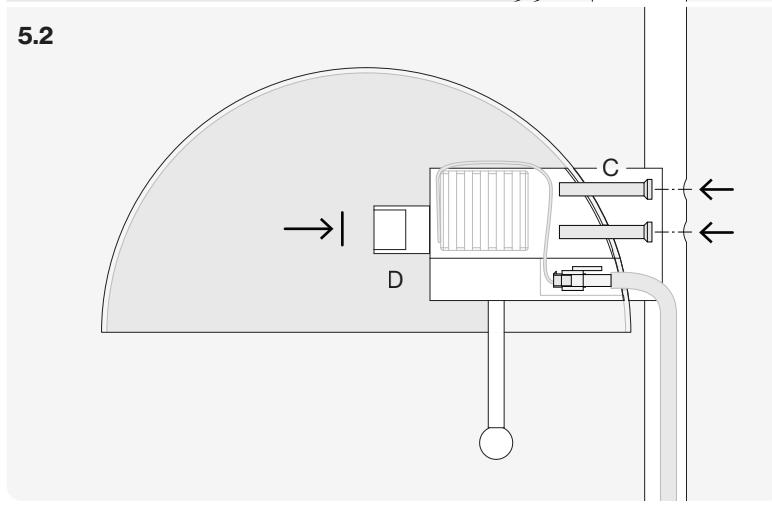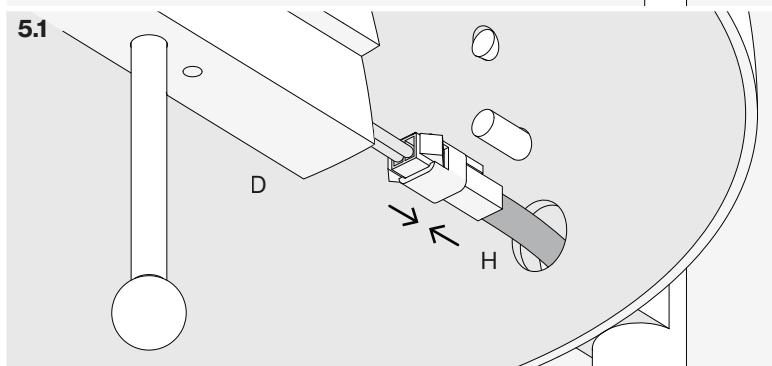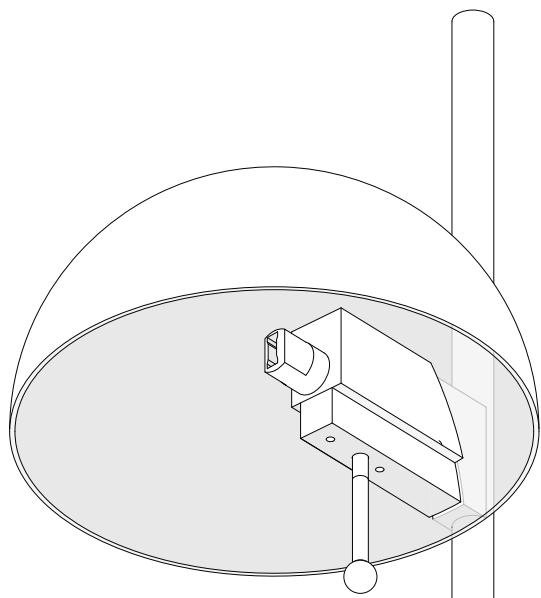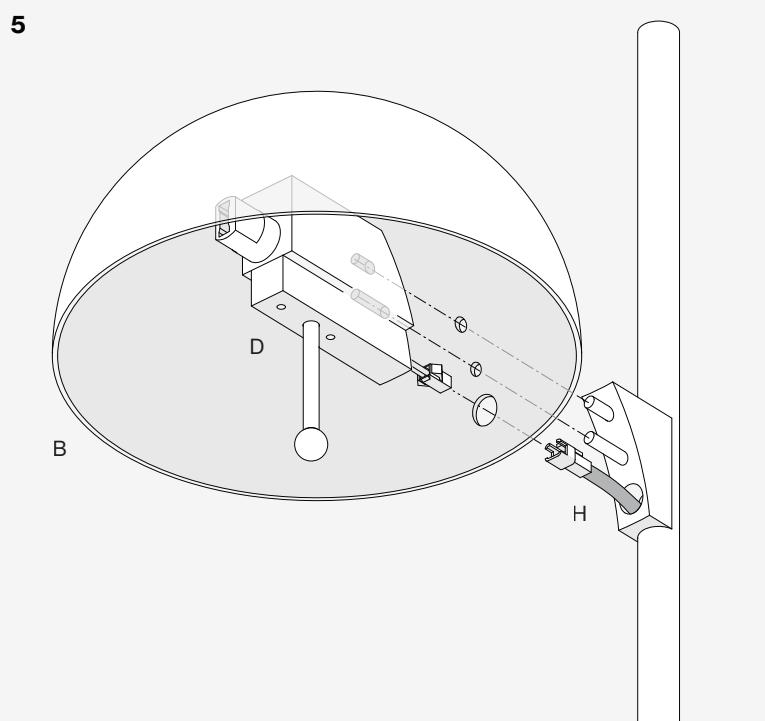

6 Insert bulb (F) into the dimmer assembly.

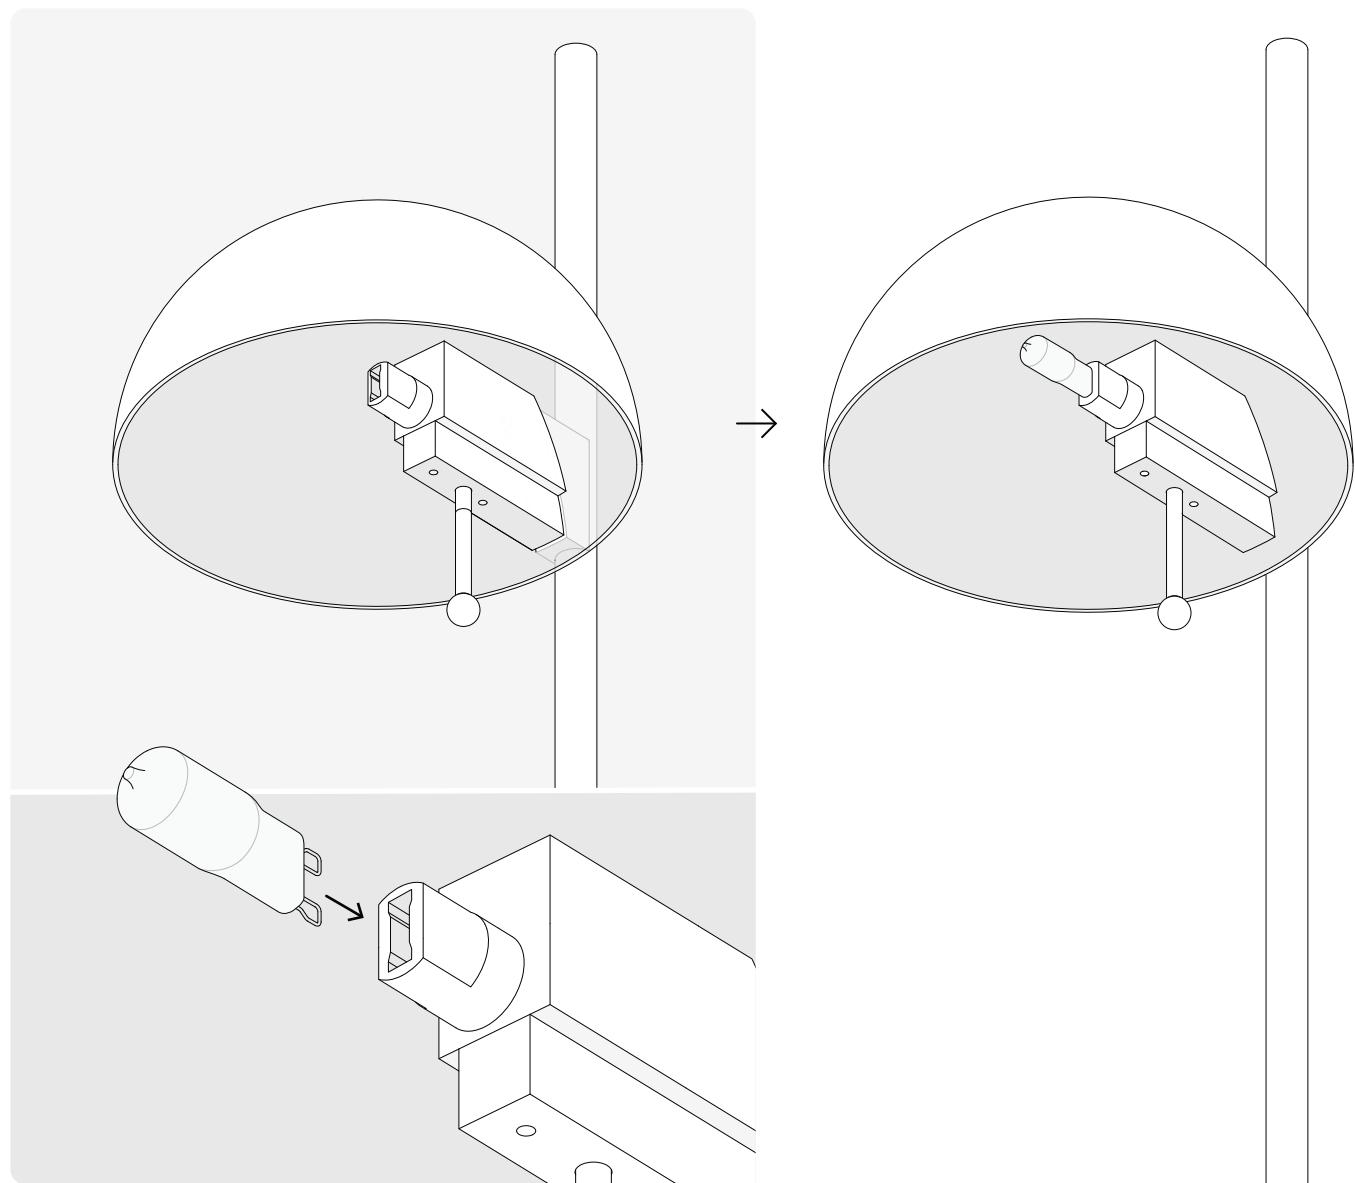


7 Insert pipe grub screws (J) on the two open holes on the top and bottom of the rod (K). Ensure the pipe grub screws are flush with the rod.



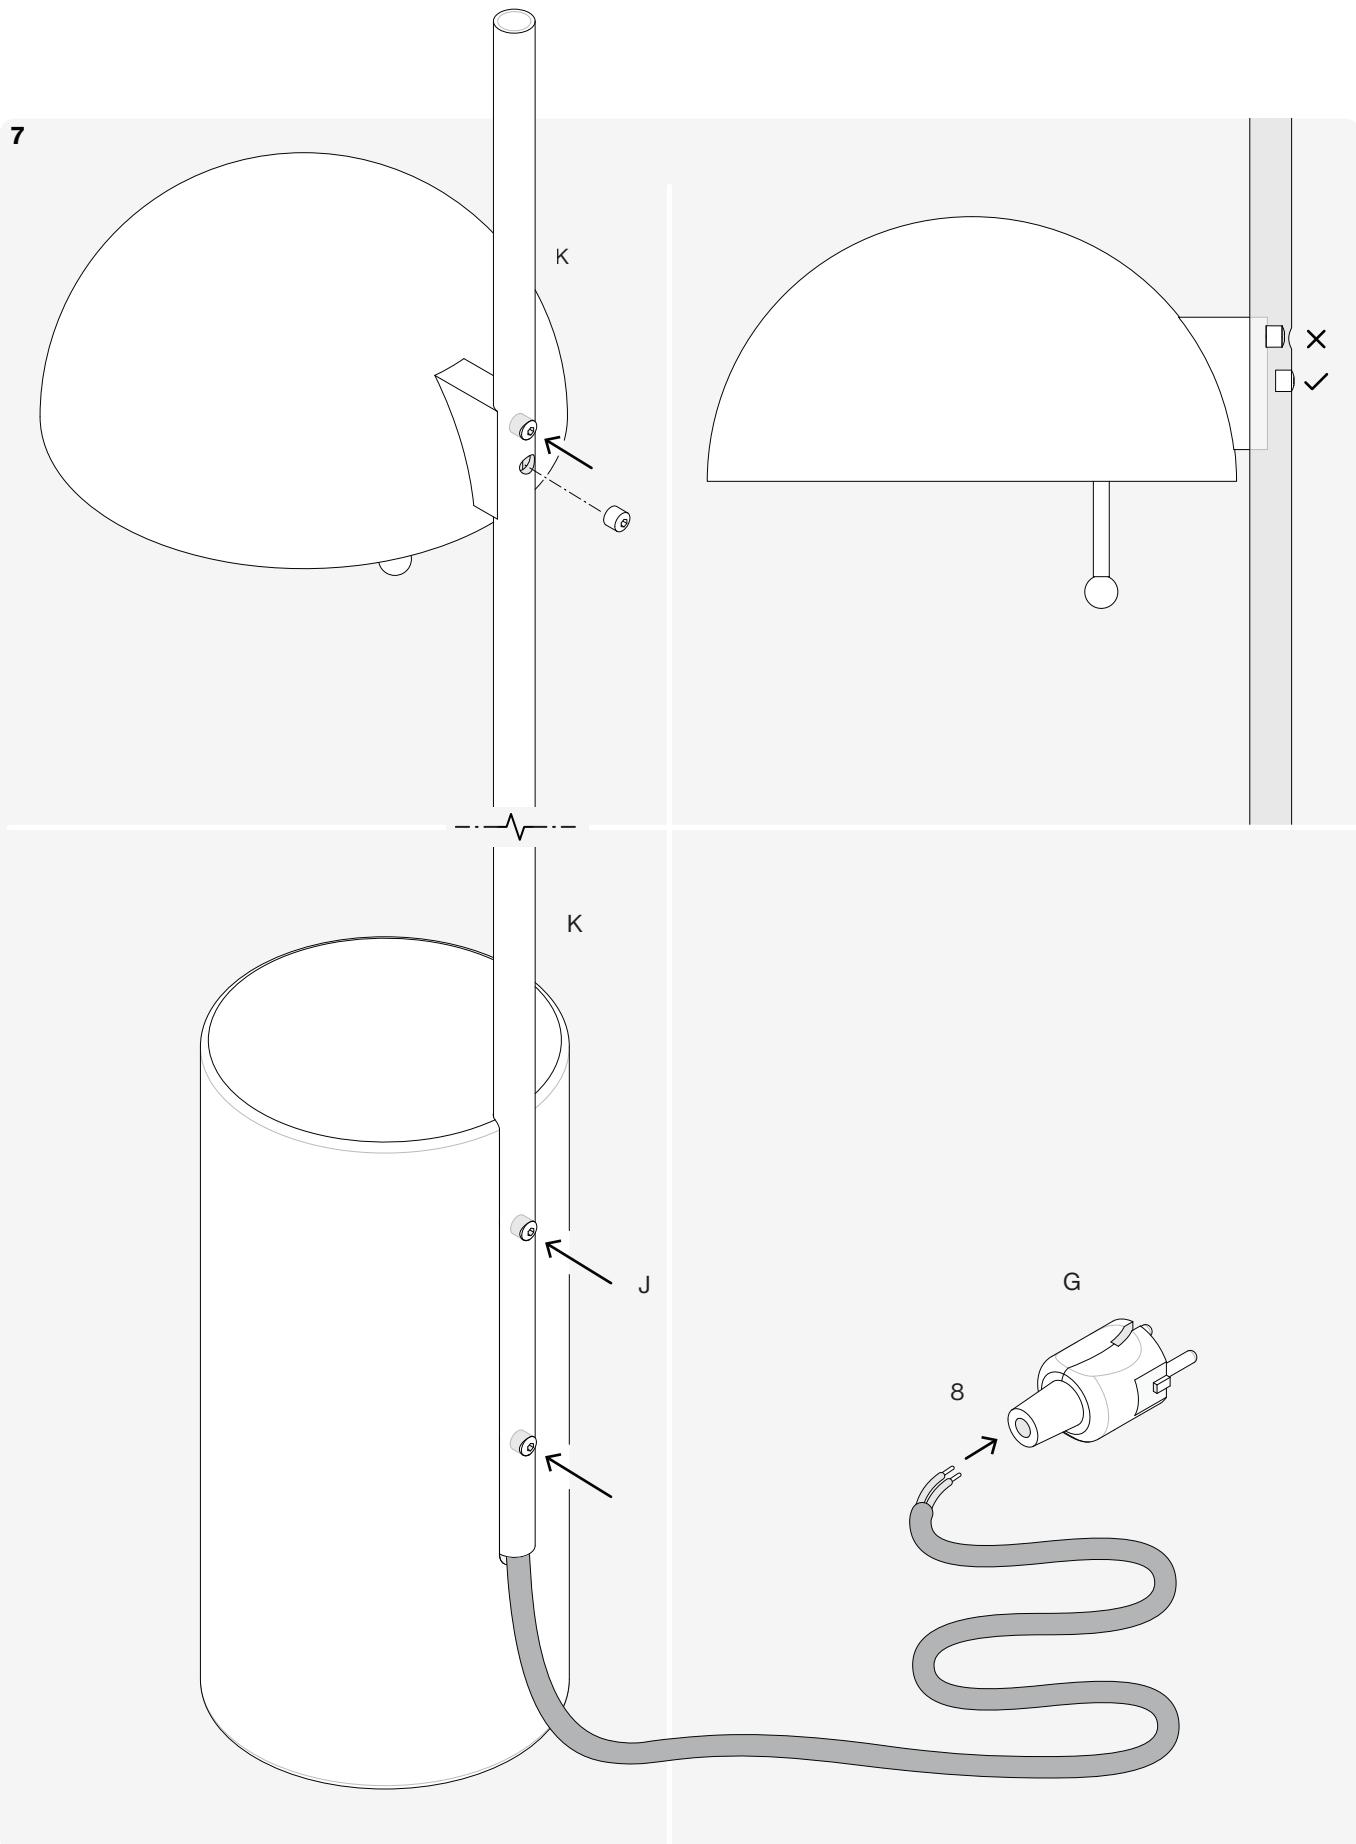



8 Open the wall plug (G) and connect the exposed cable from the bottom of the rod (K) as illustrated.

8

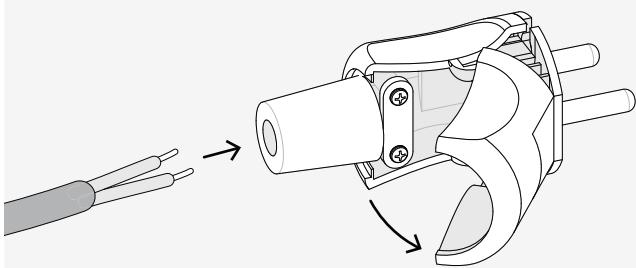

phillips head screw

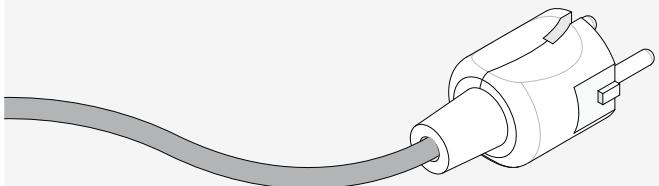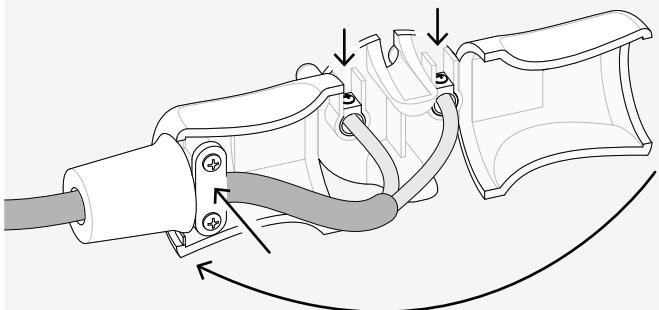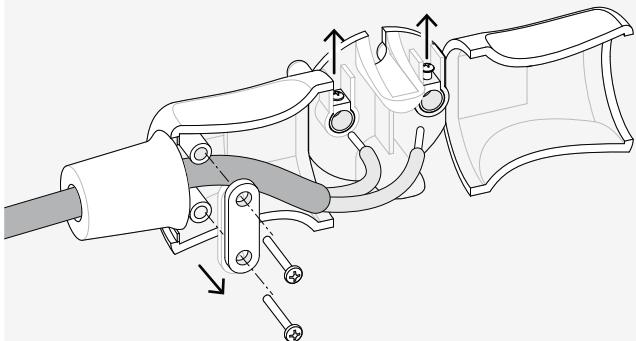



Care **Brass** can be polished when desired with any brass cleaning agent to recover its original shiny gold look. However, we recommend it be left to age naturally.

Stone, being slightly porous, can be simply wiped with a clean cloth.



Casegoods was born out of a passion for materials, a commitment to the act of making, and an awareness of our impact as designers on the shared environment. Our products are rooted in the Indian tradition of craft while remaining considerate to contemporary living.

We believe that the greatest form of sustainability is to produce work of lasting value. In that spirit we endeavour to design products that are simple, beautiful, functional and can be cherished for generations.

mail@casegoods.in

[@casegoods.in](https://twitter.com/casegoods.in)

www.casegoods.in